




1. Buttons and interface

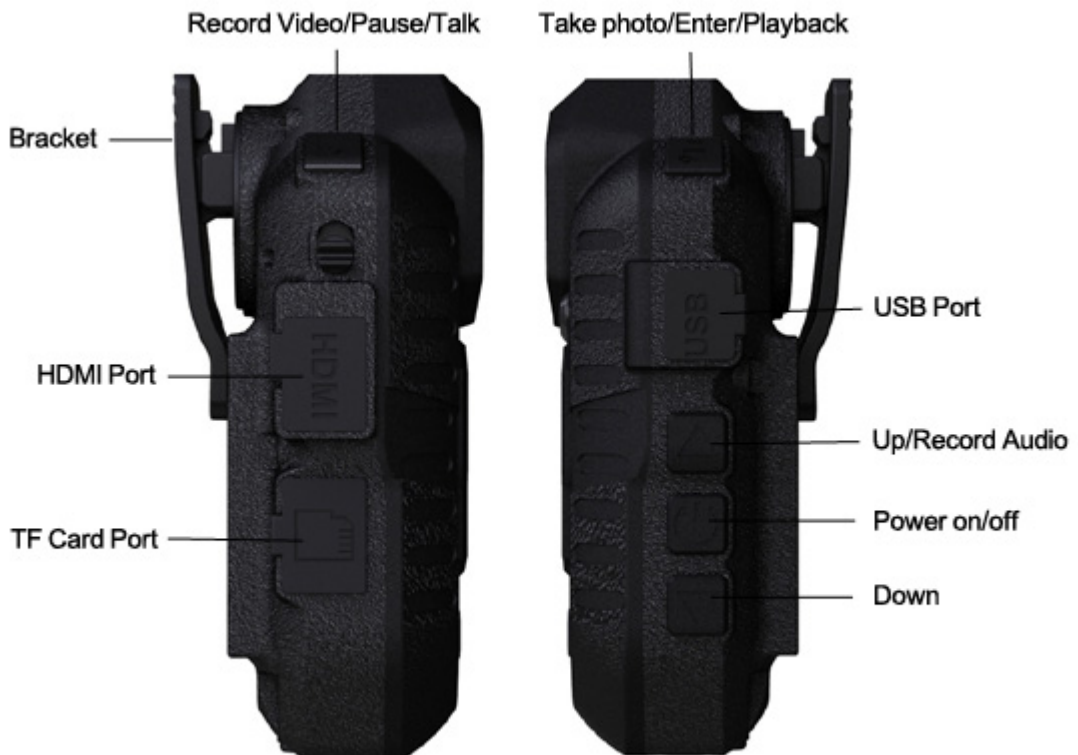

Basic operation:

1)Turn on / Turn off

Press **【Power ON/OFF】** button for 3 seconds to turn on the machine, Press **【Power ON/OFF】** button again for 3 seconds to turn off the machine.

TF should insert into device before turning on,If you insert TF card after device turning on,you can't read TF card successfully.

After booting 1 minute without any operation, it automatically enters saver-mode. If the screensaver mode last 2 minutes, it will automatic turn off.

【Notice】 You should insert TF card to the machine first, then turn on the machine. If you turned on the machine first, then insert TF card, it can not read the card.

2)Reset function

When the machine crashes or has other abnormal situations, please click reset button to force shutdown.

3)Turn on / off IR light

Press **【IR ON/OFF】** button to turn on the dichromatic led light, press **【IR ON/OFF】** button again, then turn off the dichromatic led light

4)Take photo

Press **【Take photo/enter/playback】** button. The sound of “click” means it takes one photo. All photos will be store to the TF card automatically.

5)Record video file

Press **【Talk/Record video/Pause】** button, It starts to record video. press **【Talk/Record video/Pause】**button again, then it stops record video. All videos will be save to the TF card automatically.

6)Record audio file

In the boot interface,press **【▲】** button, it starts to record audio. press **【▲】** button again, then it stop record video. All videos will be save to the TF

card automatically.

7)Intercom

Please see the picture,intercom cable connect with device:

8)Play back photos, video and voice on the machine

1. playback photos

Press 【 take photo/enter/playback 】 button for 3 seconds, Get into the playback interface. Press 【 ▼ 】 button to choose the item “photo”. Press 【 M/OK 】 button to check the photos. After checked the photos, Press 【M/OK】 button for 3 seconds back to the main interface.

2. playback video

Press 【 take photo/enter/playback 】 button for 3 seconds, Get into the playback interface. Press 【 ▼ 】 button to choose the item “video”. Press 【 M/OK】 button to play the videos. After playback videos, Press 【M/OK】 button for 3 seconds back to the main interface.

3. playback audio

Press 【 take photo/enter/playback 】 button for 3 seconds, Get into the playback interface. Press 【 ▼ 】 button to choose the item “audio”. Press 【M/OK】 button to play the voice. After playback voice, Press 【M/OK】 button for 3 seconds back to the main interface.

9)How to delete photos, video and audio files

Connect the machine to the computer, input the correct password. Enter the "high-definition police dvr software", click "enter U-disk". Then you can delete photos, video or audio files from the removable hard drive of the computer.

10)Set the machine

1. Resolution: 1280*720 / 1440*1080/ 1920*1080 is optional

Press 【 M/OK 】 button for a long time, Get into the playback interface. Press 【Down】 button to choose the resolution you need. Press 【M/OK】 button for seconds, then back to the main interface.

2. Date

Connect the machine to the computer, input the correct password (The

factory default password is 000000). Enter the interface of the "high-definition police dvr software" to set. (Please check the software user manual)

3. Time

Connect the machine to the computer, input the correct password (The factory default password is 000000). Enter the interface of the "high-definition police dvr software" to set. (Please check the software user manual)

4. Password

Connect the machine to the computer, input the correct password (The factory default password is 000000). Enter the interface of the "high-definition police dvr software" to set. (Please check the software user manual)

5. ID number

Connect the machine to the computer, input the correct password (The factory default password is 000000). Enter the interface of the "high-definition police dvr software" to set. (Please check the software user manual)

6. USB encryption

Connect the machine to the computer, input the correct password (The factory default password is 000000). Enter the interface of the "high-definition police dvr software" to set. (Please check the software user manual)

11)Recharge

It can be recharged with professional adapter through the USB interface. It also can be recharged via data cable to the computer. This item can connect one POWER BANK to recharge.

12)GPS function(Optional)

It can show the longitude and latitude on the photo or when record video.

Sensor	5 Mega Pixel CMOS sensor
Lens	120degree(wide angle lens)
Zoom	4×digital zoom
Monitor	1.5inch 16:9 TFT LCD 960*240
Video output	AV jack:compatible with NTSC
Photo	JPG format; Max pixel:5.0 Mega pixel
Video	H264 Compression format 1920×1080,30fps 1440×1080,30fps 1280×720,60fps
Video format	MP4
Audio	Built-in microphone/speaker
Storage	Internal memory:32M External memory:Max32GB TF card
Shutter	Electronic shutter
Shutter speed	1/2 – 1/2000s
Talk	Intercom,Talk
IR CUT	Switchable Day and Night
White balance	Auto
USB	USB2.0
Battery	High capacity lithium rechargeable battery,3.7V1950mAh
Humidity/temperature	10%-80% / -30-60(°C)
Recording time	1080p 1GB(about 10 minutes),720p 1GB(about 15minutes)
Lowest Voltage	3.5V
Boot the mache current	About 200mA(when turn on),about 270mA(when recording),about 320mA(when turn on IR lights)
Waterproof	IP65



ALLWAN-SECURITY France
www.allwan-security.com
Tel : 33 (0)241 350 125
Mail: info@allwan.fr

ALLWAN SECURITY
TEL: 0 825 600 626

5. Accessories

1. police DVR
2. adaptor(5V)
3. AV cable
4. USB cable
5. User manual
6. CD
7. Intercom cable (optional)
8. one standard/HD 1080P camera(optional)